

EN – Instructions for installation of modular outlets (HDMI, RJ45, SAT, TV) in RETRO design

1. During installation of the modular outlets, the following conditions must be observed:

- The switch mounting box must be placed flush with the plaster
- In case of problems with a “sunk” mounting box, the VK1 or VK2 spacer (distance) rings must be used in order to prevent deformation of the fittings when the screws are tightened. They are not included.
- The switch is fastened in the mounting box through a sheet-metal frame by means of two screws of 3 mm diameter
- To install multiple fitting assemblies, it is necessary to use multiple boxes with the spacing of centres of 71 mm
- It is recommended to place the modular outlets in the mounting boxes at the approximate depth of 40 mm

2. Completion of the switch installation:

- Put the modular outlets into the sheet-metal frame (Fig. 1). For the PC module, the other insertion position is shown in Figure 4.
- Put the metal frame with modular outlets into the mounting box and secure it by tightening two screws (Fig. 2)
- Place a frame (ceramic, wood, glass, concrete) on the metal frame of the device and lock it with screws (Fig. 3). With the glass frame is handle connected together. When using ceramic frame, tighten screws with a torque of 0,05 Nm – this prevents cracking of the frame due to its brittleness

Fig. 1

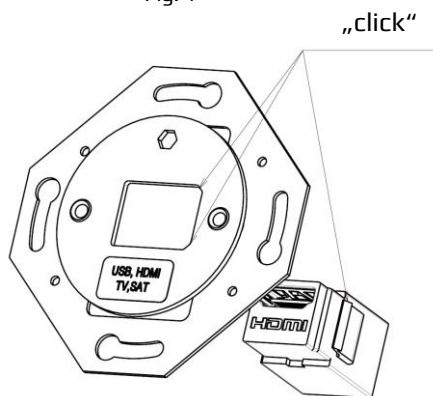


Fig. 2

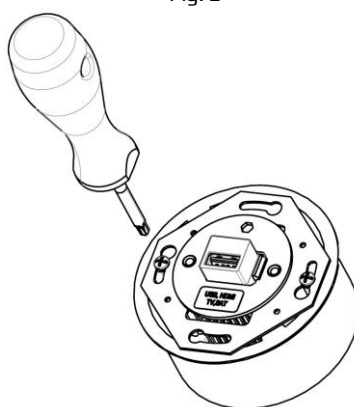


Fig. 3



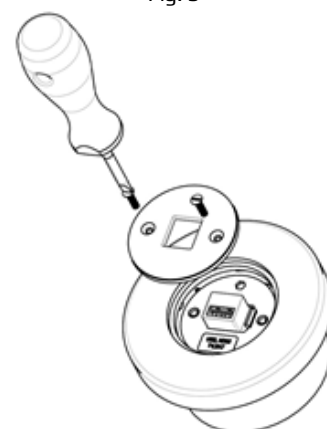


Fig. 4

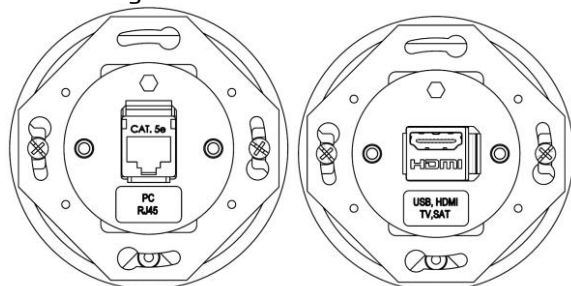


Modular outlets HDMI, RJ45, SAT, TV, etc.



The VK1 or VK2 spacer (distance) rings are not included.

VK1

VK2

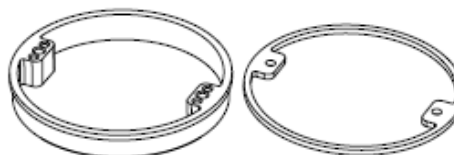

Maintenance:

The modular outlets does not require any maintenance!

Covers of the modular outlets must never be wiped or washed by abrasive cleaning cloths and no aggressive chemicals (petrol, acetone, etc.) may be used on them.

This product does not contain any hazardous substances. At the end of its life, it must be handled in terms of the applicable Waste Act, as amended.